


MODEL T4

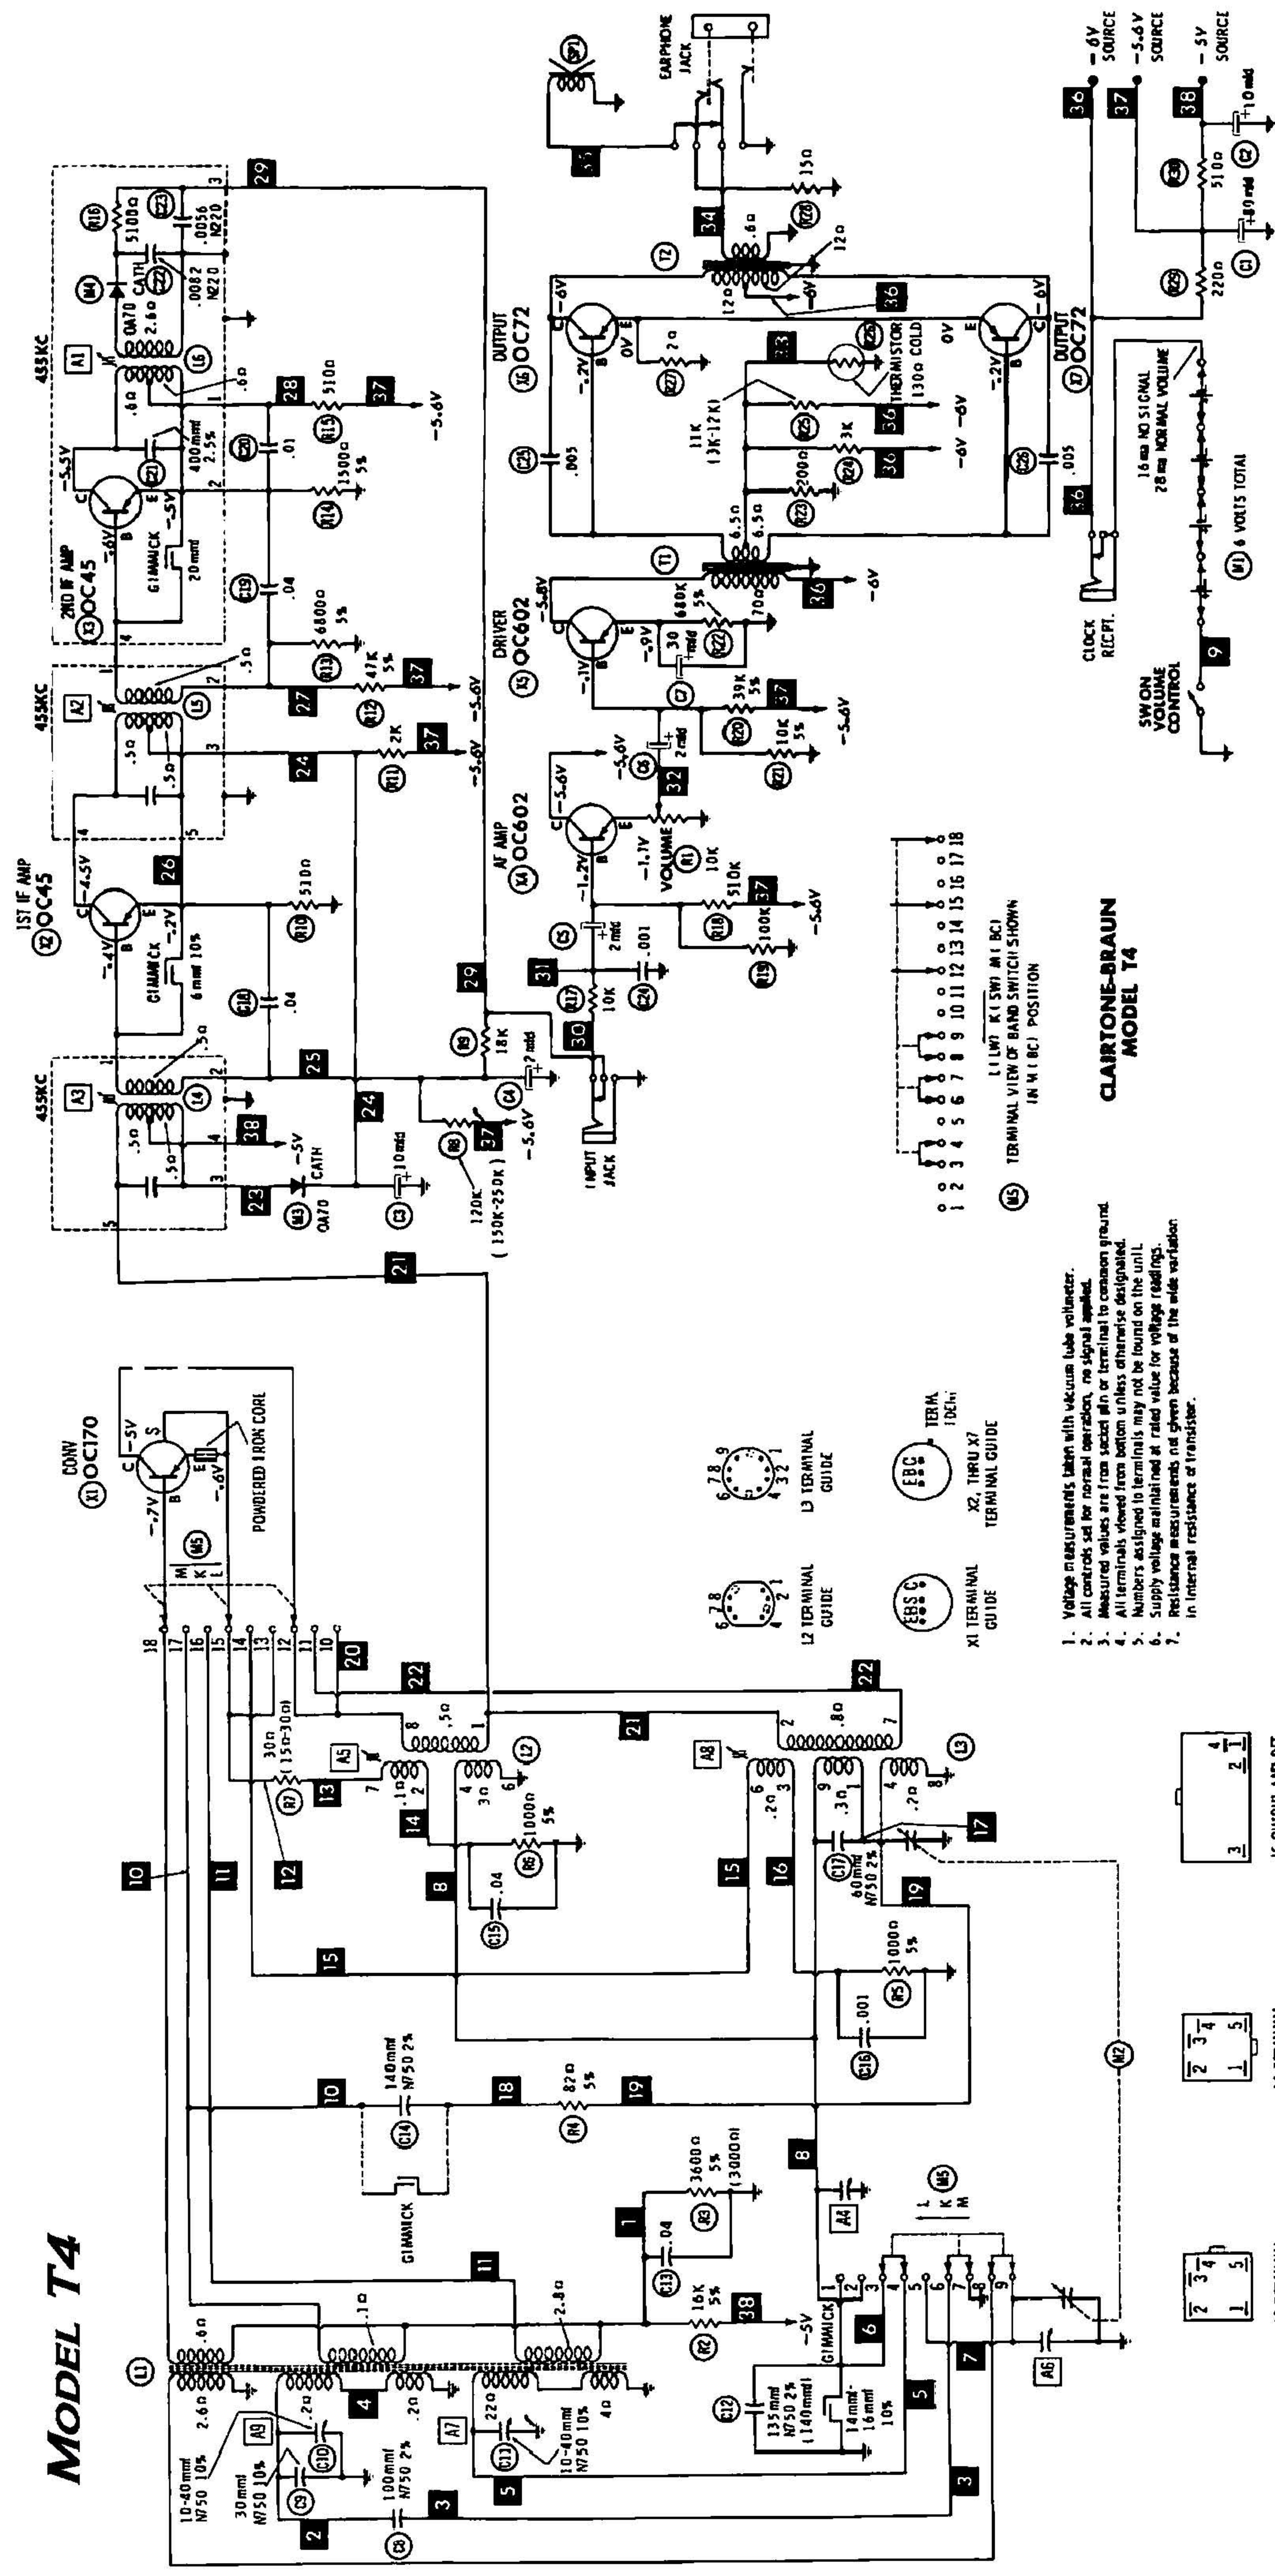


ALIGNMENT INSTRUCTIONS

Check for specified source voltage.
Fashion loop of several turns of wire and connect generator across loop.
Adjust output of generator to radiate only enough signal into receiver to obtain a suitable indication.

Suggested Alignment Tools:

A1, A2, A3, ...	GENERAL CEMENT #8606, 8282, ...	WALSCO #2526, 2543
A4, A6, A7, A9, ...	GENERAL CEMENT #5000, 8290, 5086, ...	WALSCO #2525
A5, A8, ...	GENERAL CEMENT #9440	

SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	INDICATOR	ADJUST	REMARKS
455KC (400% Mod.)	Tuning gang fully open.	Output Meter across voice coil.	A1, A2, A3	Adjust for maximum. Repeat as required.
1620KC	"	"	A4	Adjust for maximum.
600KC	Tune to Signal.	"	A5	Rock tuning gang and adjust for maximum. Repeat steps 2 and 3.
1400KC	"	"	A6	Adjust for maximum.
255KC	"	"	A7	"
6.1MC	6.1MC	"	A8	Adjust for maximum. If unable to obtain tracking adjust (A4) and repeat Steps 5 & 6.
7.2MC	7.2MC	"	A9	"

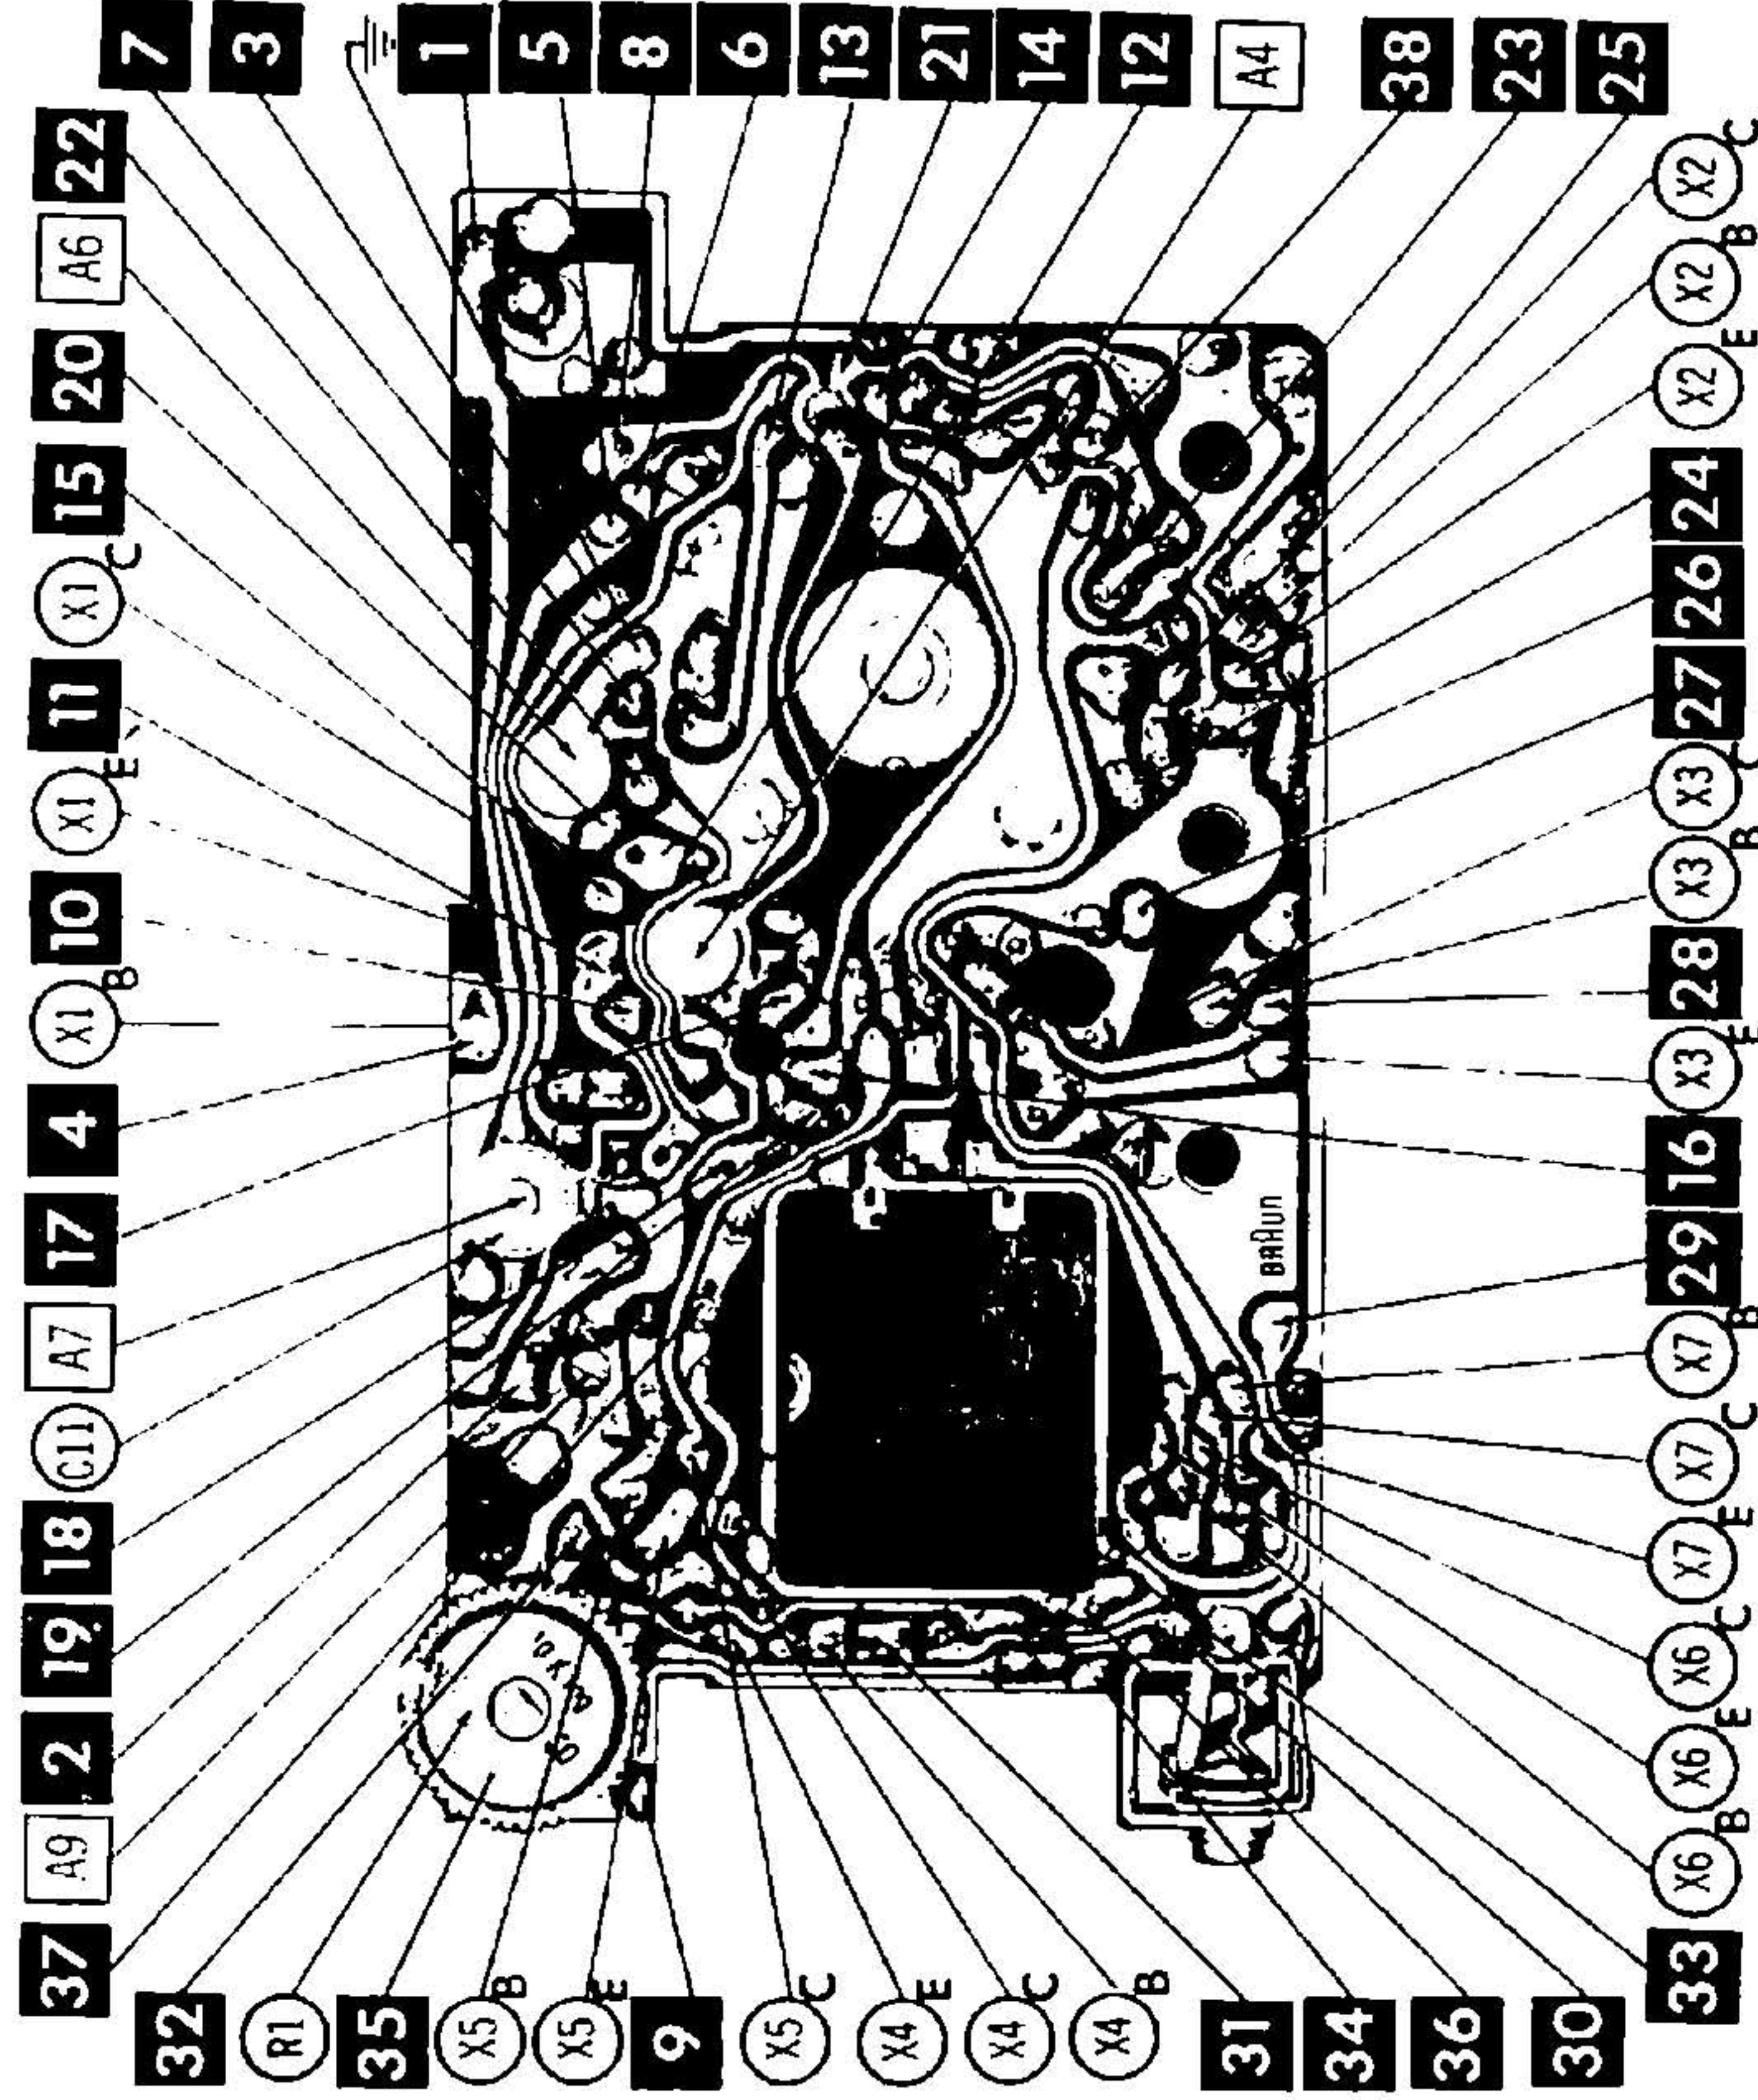

E-EMITTER B-BASE C-COLLECTOR